AERODROME CHART

BEARINGS ARE MAGNETIC
ALTITUDES, DISTANCES,
ELEVATIONS AND HEIGHTS
IN METERS

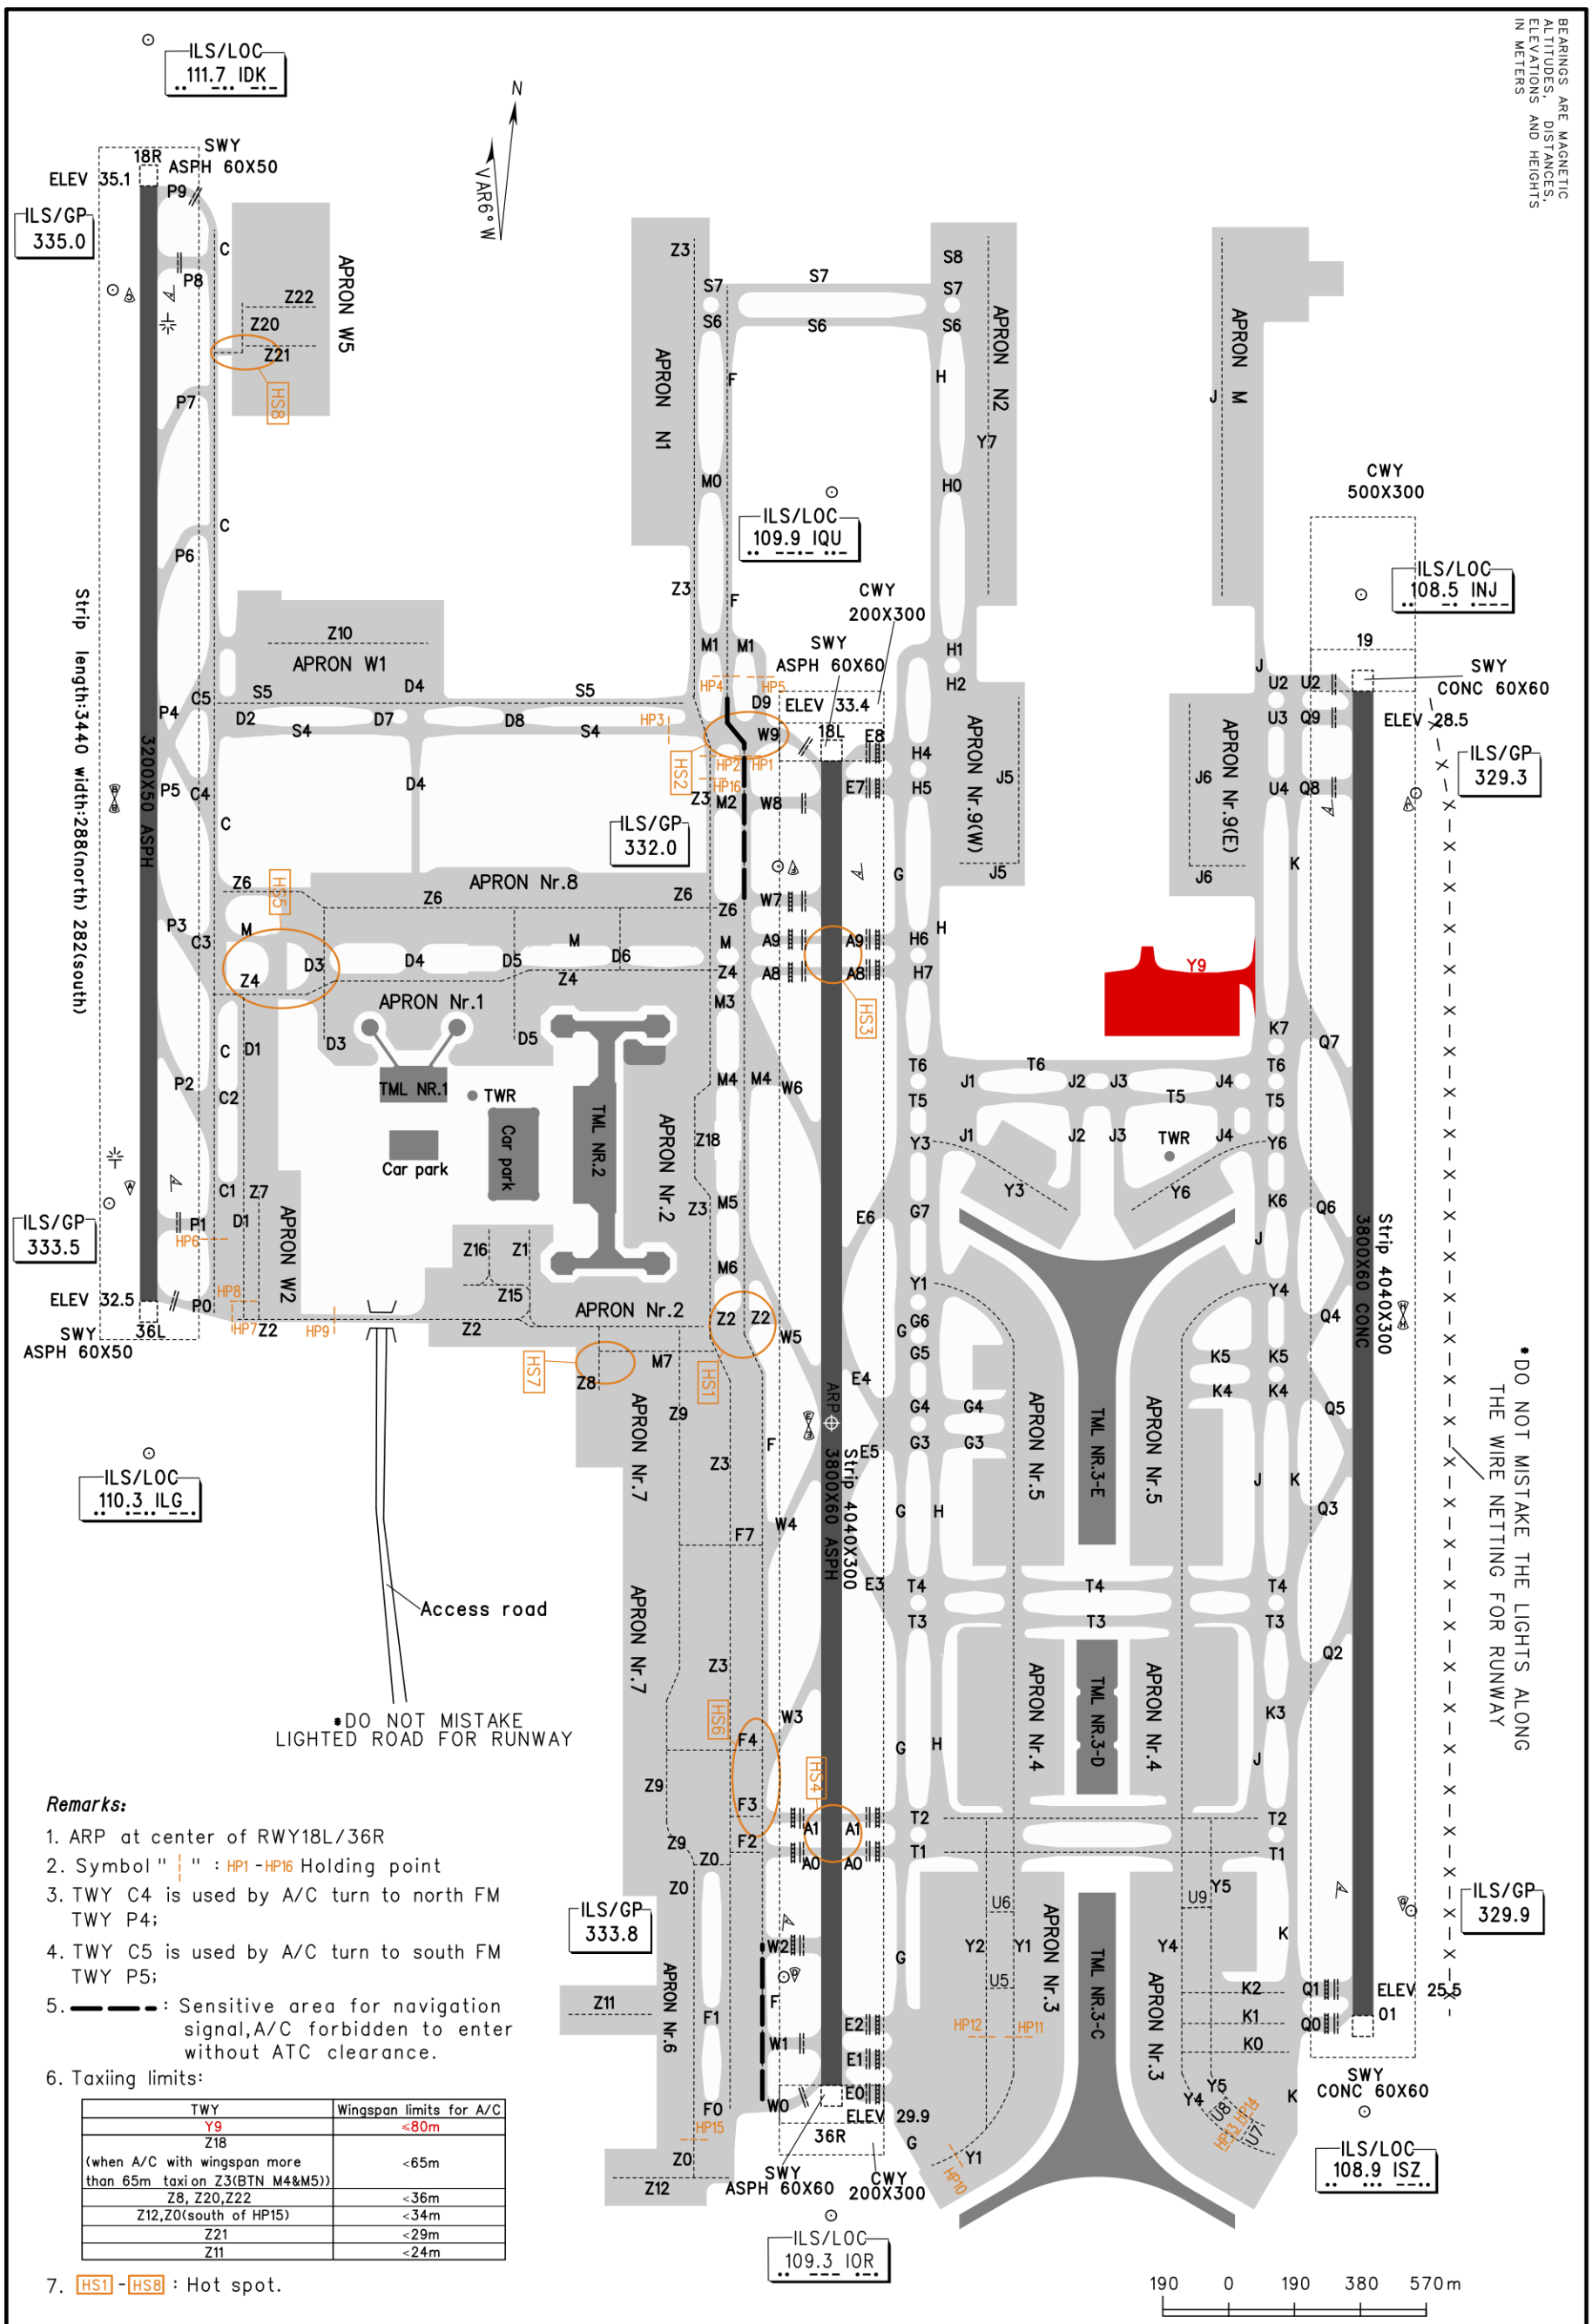

D-ATIS 127.6 for arrival
128.65 for departure
124.3(118.3) TWR01 for 18R/36L
118.5(118.05) TWR02 for 18L/36R
118.6(118.3) TWR03 for 01/19

GND 121.9(121.95) GND01
121.8(121.95) GND02
121.7(121.95) GND03
121.75(121.95) GND04
121.85(121.95) GND05

TWR 121.6 (west of RWY 18L/36R) (DCL AVBL)
118.5(118.05) TWR01 for 18R/36L
118.6(118.3) TWR03 for 01/19
124.3(118.3) TWR02 for 18L/36R
128.65 for departure
127.6 for arrival

DELIVERY01 121.6 (west of RWY 18L/36R) (DCL AVBL)
DELIVERY02 121.65 (east of RWY 18L/36R) (DCL AVBL)

ZBAA BEIJING/Capital

N40°04.4'E116°35.9' ELEV 35m

Remarks:

1. ARP at center of RWY18L/36R
2. Symbol " ¦ " : HP1 - HP16 Holding point
3. TWY C4 is used by A/C turn to north FM TWY P4;
4. TWY C5 is used by A/C turn to south FM TWY P5;
5. ▬ ▬ ▬ : Sensitive area for navigation signal, A/C forbidden to enter without ATC clearance.
6. Taxiing limits:

TWY	Wingspan limits for A/C
Y9	≤80m
Z18 (when A/C with wingspan more than 65m taxi on Z3(BTN M4&M5))	<65m
Z8, Z20, Z22	<36m
Z12, Z0(south of HP15)	<34m
Z21	<29m
Z11	<24m

7. HS1 - HS8 : Hot spot.

RWY	18L/18R/19	01/36L/36R
Direction	179°	359°

Bearing strength (PCN)

RWY 01/19, APRON N1,N2, Nr.4, Nr.3(N of 307&331), Nr.5(S of 510&529) 117/R/B/W/T
TWY D9,F(N of S4),G0-G7,G,H,H0-H2,H4-H7, J(others),J1,J4,K,K0-K7,M0,M1,Q0,Q1,Q8,Q9,S6-S8 T1-T6,U2-U9,Y1,Y2,Y4,Y5,Y7,Z3(north of S4)
RWY 18L/36R 108/F/B/W/T
TWY A0,A1,A8,A9,E0-E8,F2,F3,W2,W7
TWY J5,J6,APRON Nr.9 100/R/B/W/T
TWY Z2(BTN stand Nr.254 and TWY Z7)
TWY M7 97/R/B/W/T
RWY 18R/36L 95/F/B/W/T
Stands Nr.205-224,226-240 301-301,331-337,501-529,557-559,801-815 95/R/B/W/T
TWY D3-D8,J2,J3,M,M2,S4,S5 W1,W8,Y3,Y6,Z6(east of Z3) 95/R/B/W/T
TWY F0 93/R/B/W/T
APRON NR.1 90/R/B/W/T
TWY F(south of S4),F4,F7,M3-M6,W0,W3-W6,W9, Z4(east of Z3), Z2(west of Z7), Z2(BTN stand Nr.254 and TWY Z3)
TWY Y9, stands Nr.936-940 86/R/B/W/U
TWY P1,P8 86/F/B/W/T
TWY C3,P2,P3,P6,P7, Q2-Q7,J(BTN M01-M12),APRON M 85/R/B/W/T
APRON W1,W2,602-605,608-612 83/R/B/W/T
TWY C1,C2,D1,D2,Z0,Z3(south of S4),Z7,Z10
Stands Nr.816-817 78/R/B/W/T
TWY C,P0,P9,Z2(east of Z3), Z4(west of Z3),Z6(west of Z3) 73/R/B/W/T
Stands Nr.251-254) 71/R/B/W/T
TWY P4,P5,C4,C5, 70/F/B/W/T
APRON Nr.7 70/R/B/W/T
Stands Nr.636-640 62/R/B/W/T
TWY Z11-Z12, Stands Nr.621-635,641-652 57/R/B/W/T
APRON W5, TWY Z20-Z22, Stands Nr.818-821 53/R/B/W/T
APRON Nr.2(stands Nr.261-268), TWY Z16 38/R/B/W/T

Changes: New apron, new TWY Y9.